



The clamping arm engages in the catch if the release button is pressed for the clamping operation. When clamping in the end position, the system locks automatically by spring force.

G

2.4