
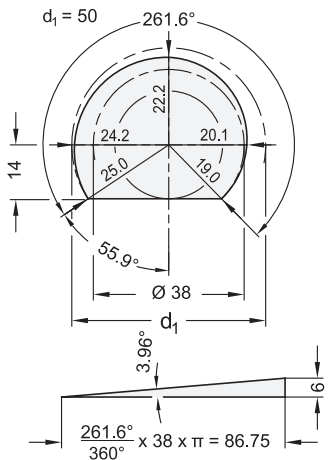
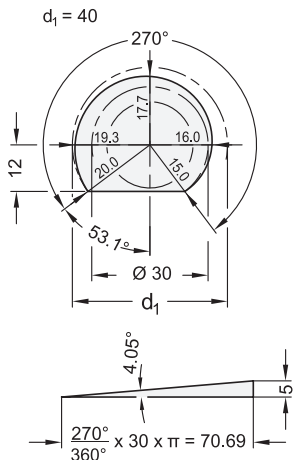


Eccentric Cams / Clamping Bolts






Clamping Stroke GN 918 ... GN 918.7

1.1
1.2
1.3
1.4
2.1
2.2
2.3
2.4




GN 918 / GN 918.5

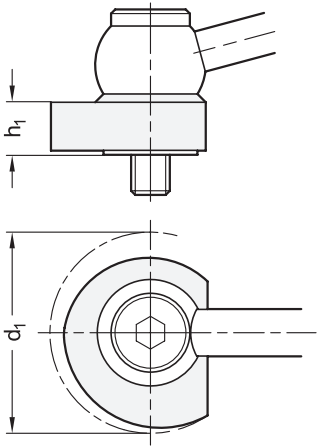

GN 918.1 / GN 918.6

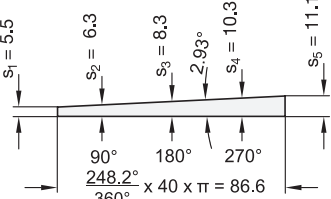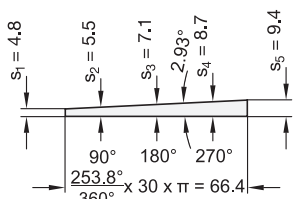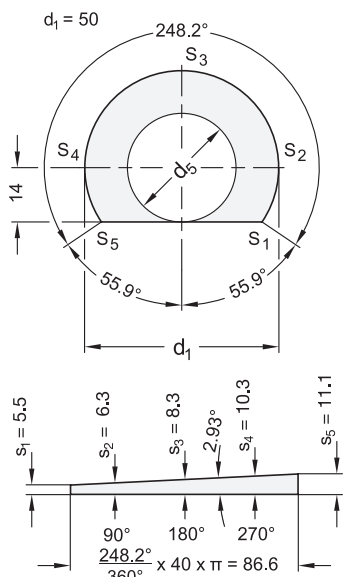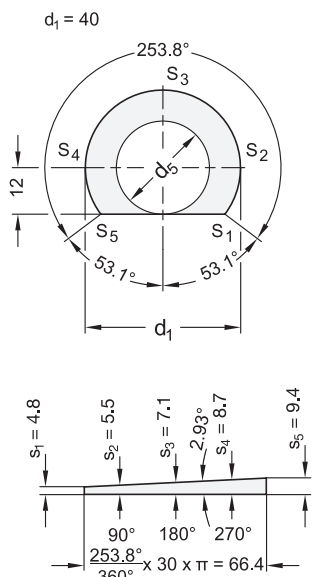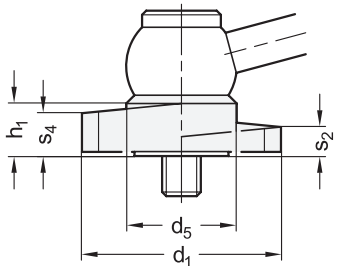

GN 918.2 / GN 918.7

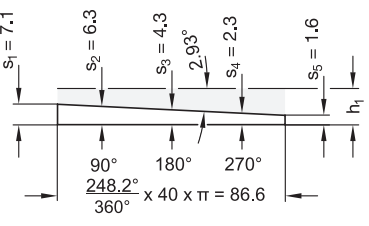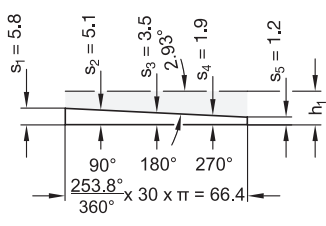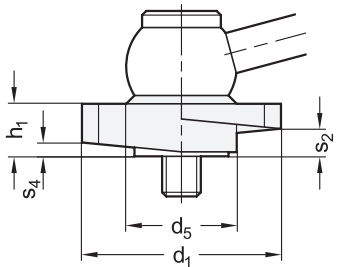


Type KV with clamping direction R (by clockwise rotation) is shown on the drawings as an example.

Eccentric Cams / Clamping Bolts


Technical Instructions / Application Examples GN 918 ... GN 918.7

Technical instructions


Type **GV / KV / SK**

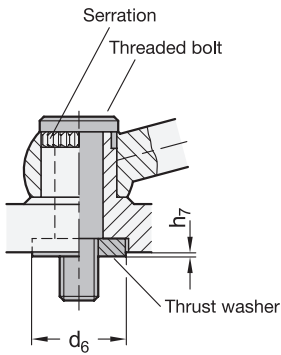

Type **GVS / KVS / SKS**

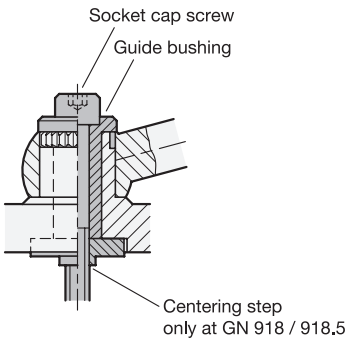


Type **GVB / KVB / SKB**

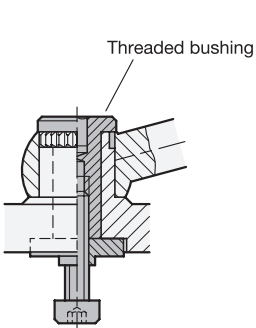

Dimensions in: millimeters / inches


d_1	d_6	$h_7 \approx$
40 1.57	20 0.79	0.2 0.01
50 1.97	24 0.94	0.2 0.01

Application examples

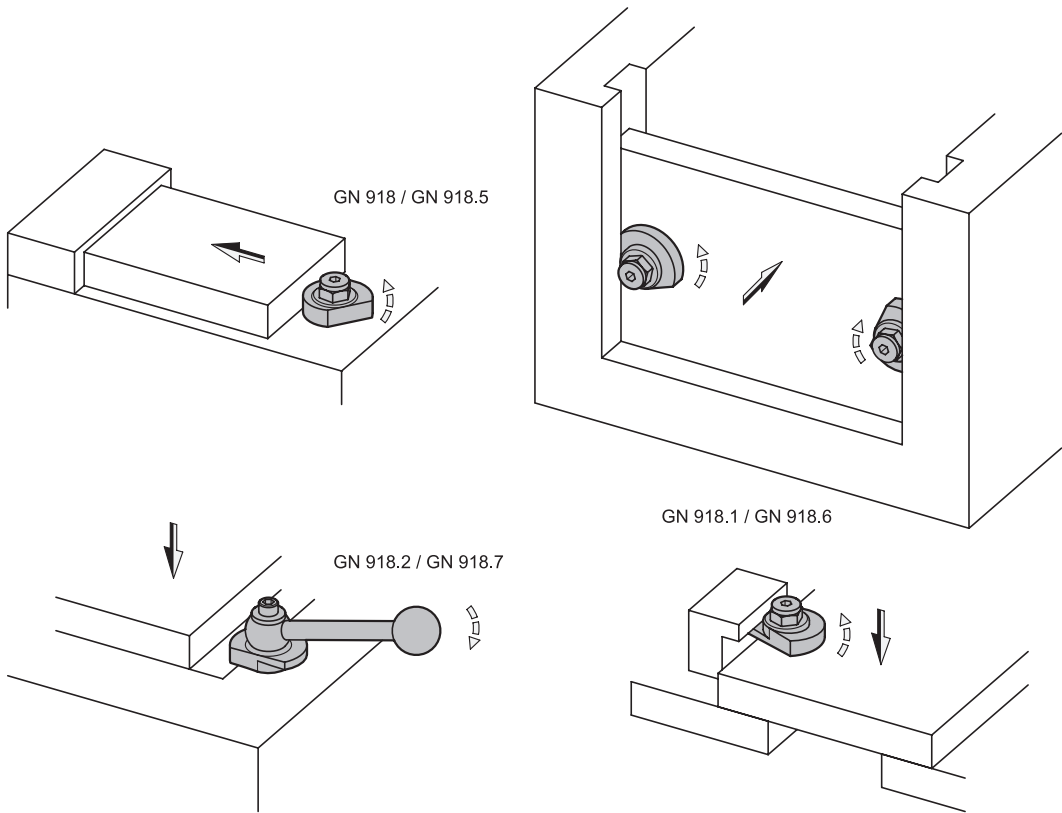

Eccentric Cams / Clamping Bolts

Installation instructions GN 918 ... GN 918.7

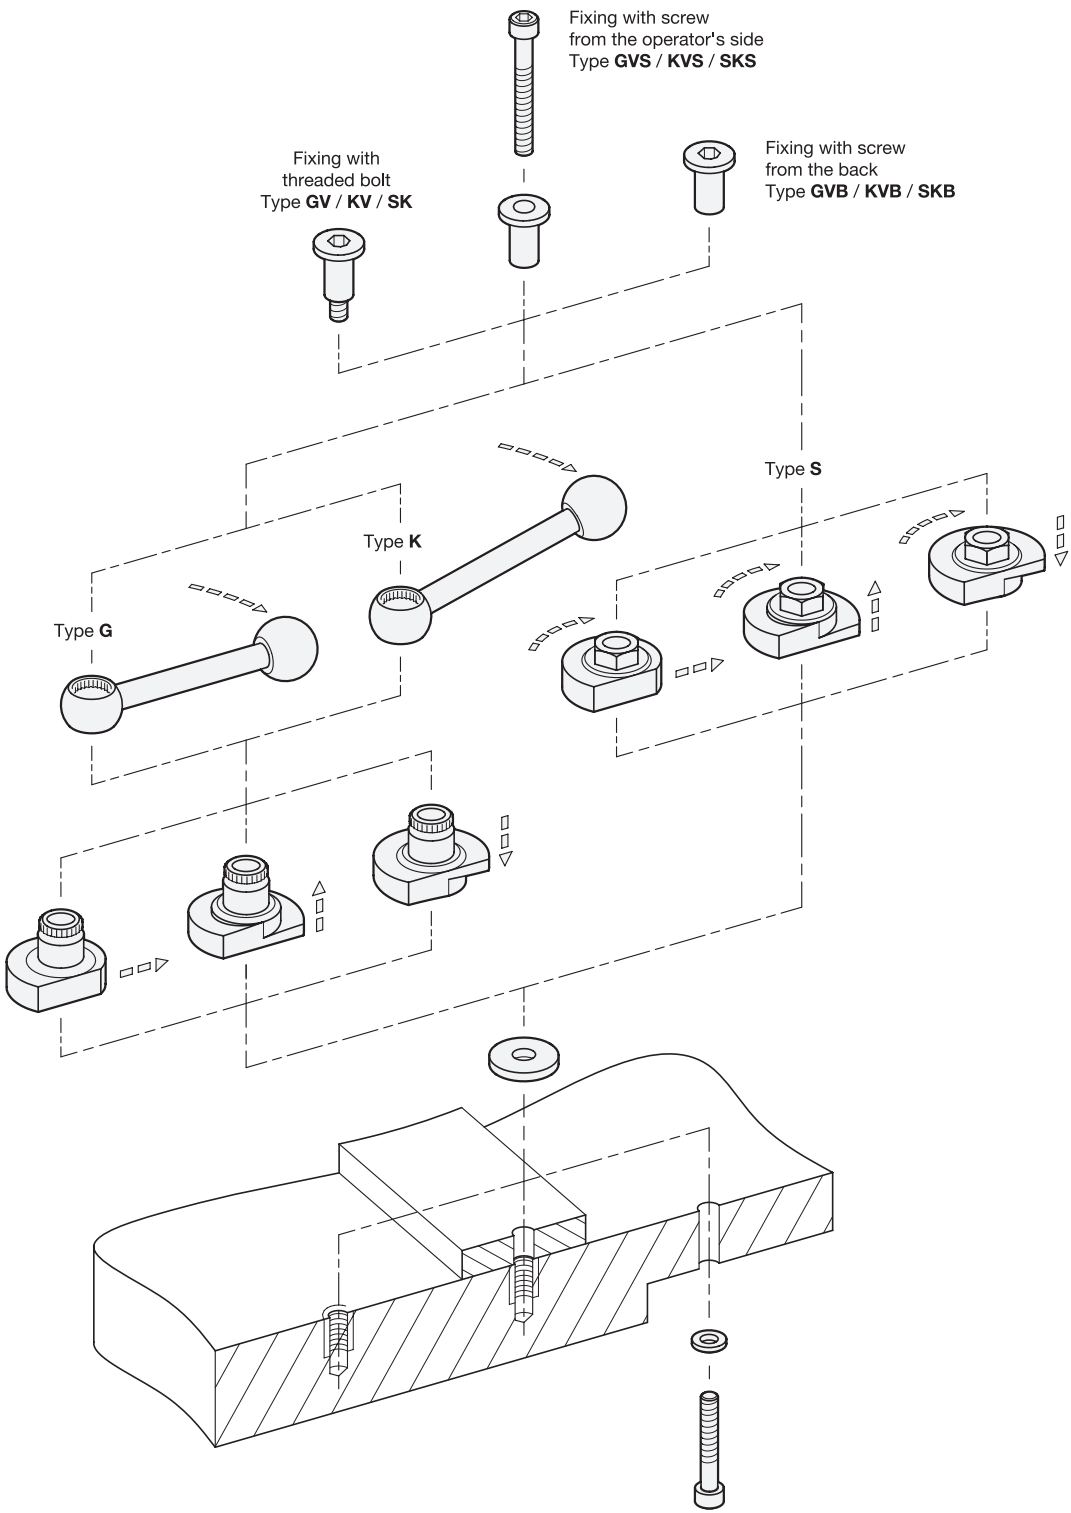

1.1
1.2
1.3
1.4
2.1
2.2
2.3
2.4

