


Mounting information

- 1) Drill the handle housing according to the template dimensions reported in the table.
- 2) Remove all drill hole burrs before assembling the handle.
- 3) Fit the upper part of the handle into the housing.
- 4) Press down on the lower part until the handle snaps in and is completely inserted.

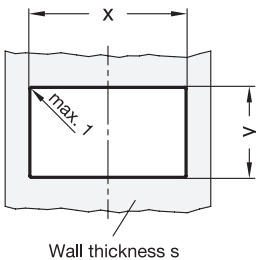

s Wall thickness	x +0.2 for $b_1 = 92$	y ±0.1	x +0.2 for $b_1 = 137$	y ±0.1
0.7 ... 0.8 0.02 ... 0.03	87.5 3.44	30.5 1.20	132 5.20	30.5 1.20
> 0.8 ... 1.2 0.03 ... 0.05	87.5 3.44	30.7 1.21	132 5.20	30.7 1.21
> 1.2 ... 1.5 0.05 ... 0.06	87.5 3.44	31.7 1.25	132 5.20	31.7 1.25
> 1.5 ... 2 0.06 ... 0.08	87.5 3.44	31.7 1.25	132 5.20	31.7 1.25
> 2 ... 2.2 0.08 ... 0.09	87.5 3.44	31.7 1.25	132 5.20	31.7 1.25

